

# PRIMUS


## Starting the Ulti Stove

**IMPORTANT!** Always ensure the fuel canister is in an upright position when starting the stove to avoid flareback.

### Standard Mode: Upright canister

*(For most conditions – best flame control)*

1. Screw the regulator valve onto the gas canister, ensuring it is securely attached.
2. Position a lit match or lighter near the edge of the burner head.
3. Turn the flame adjuster valve about one and a half turns to release and ignite the fuel.
4. Adjust the flame using the valve to maintain a steady glow and flame.

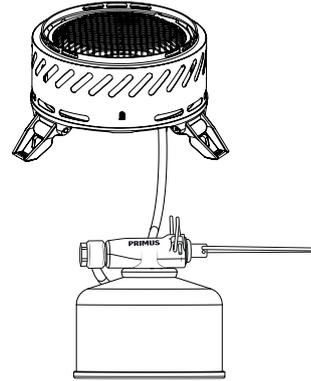


### Special Liquid Feed Mode: Inverted Canister

*(For very cold conditions or when there is insufficient pressure in the canister)*

1. Screw the regulator valve onto the gas canister, ensuring it is securely attached.
2. Position a lit match or lighter near the edge of the burner head.
3. Turn the flame adjuster valve about one and a half turns to release and ignite the fuel.
4. Let the stove run for at least 60 seconds to preheat properly.
5. Carefully invert the canister, ensuring it rests securely on the support wires.
6. Adjust the flame using the valve to maintain a steady glow and flame.
7. Once sufficient pressure and heat are achieved, return the canister to the upright position if possible.



Only flip the gas canister if necessary to keep the stove running. Let the stove heat up for at least 1 minute before flipping the gas canister.

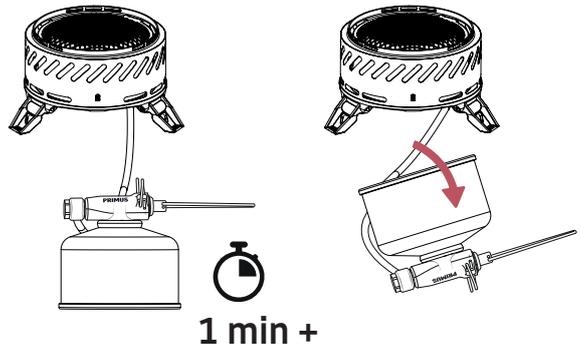

## WARNING!

To minimize the risk of flashback, we strongly recommend using Primus Power Gas or Primus Winter Gas canisters. These fuels contain a propane and isobutane mixture, which is specifically designed for the Ulti Stove System. Fuel types containing butane are not recommended as they increase the risk of flashback.